Installation Instructions

MidSection Privacy Panel w/ Viewer

NOTE
This Privacy Panel is for mounting an X-ray Viewer that is manufactured by Clive Craig Co.
X-ray Viewer must be purchased separately. Clive Craig's part number for Viewer is 31325.

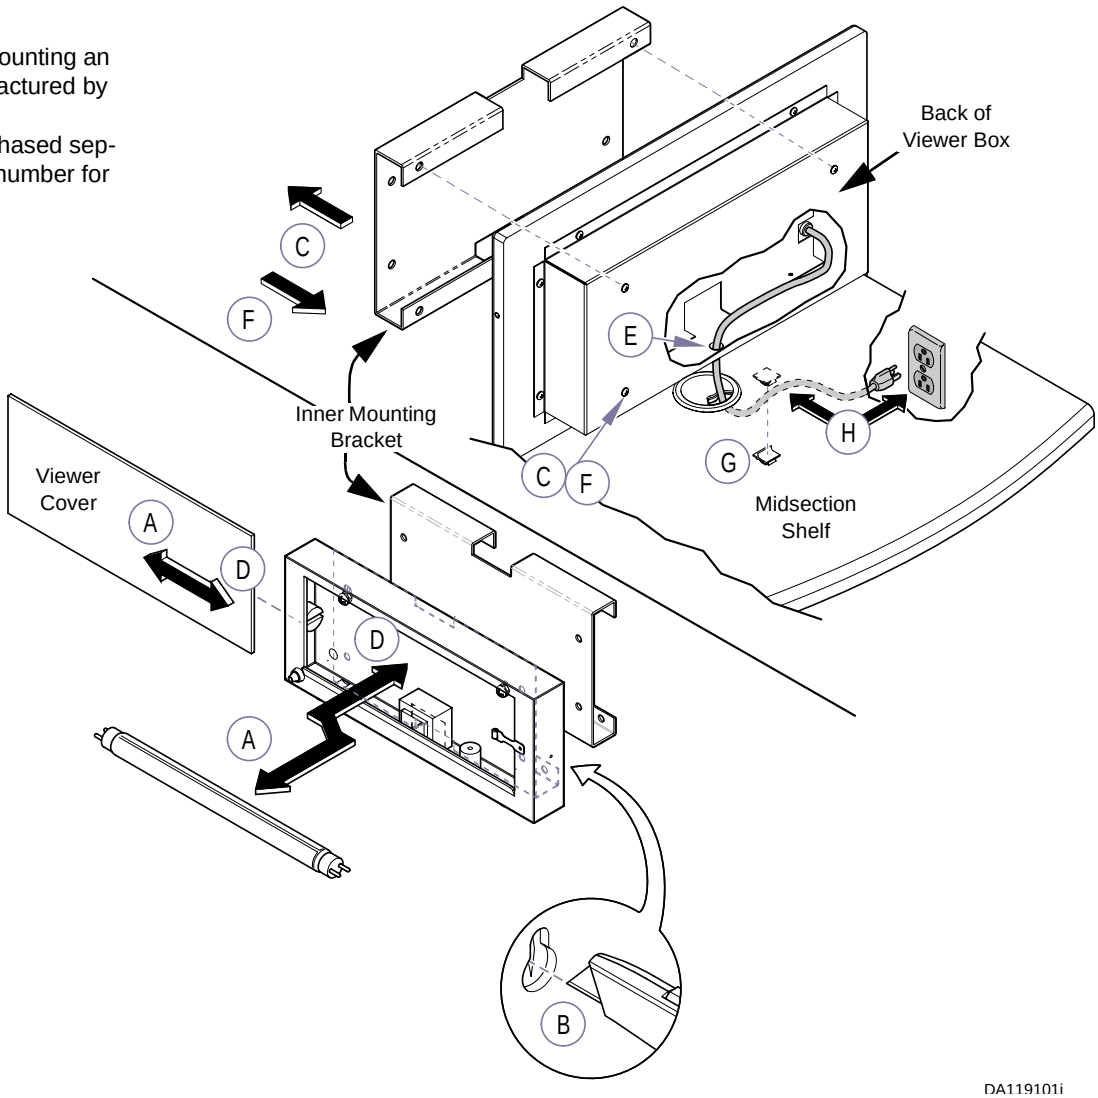

A. Remove viewer cover and bulb.

NOTE
Slits must be cut in reflector of Viewbox at keyholes for insertion of mounting screws.

B. Using keyholes as guides, cut slits in reflector for mounting screws.

C. Remove inner Mounting Bracket from Outer Cover (4 screws, #10-24 x 3/8" phillips head).

D. Align keyhole slots, on back of Viewbox, with the two screws on the Mounting Bracket and tighten screws then, install bulb and view cover.

E. Insert cord through access notch in Viewbox cover.

F. Install Viewbox with Mounting Bracket into Outer Cover and secure with 4 screws (#10-24 x 3/8" phillips head).

NOTE
The following steps to be completed after the Privacy Panel with Viewbox has been installed.

G. Remove backing form adhesive strip and place cord cloip in place.

H. Secure cord in clip and plug into outlet.

© Midmark Corporation - 2002

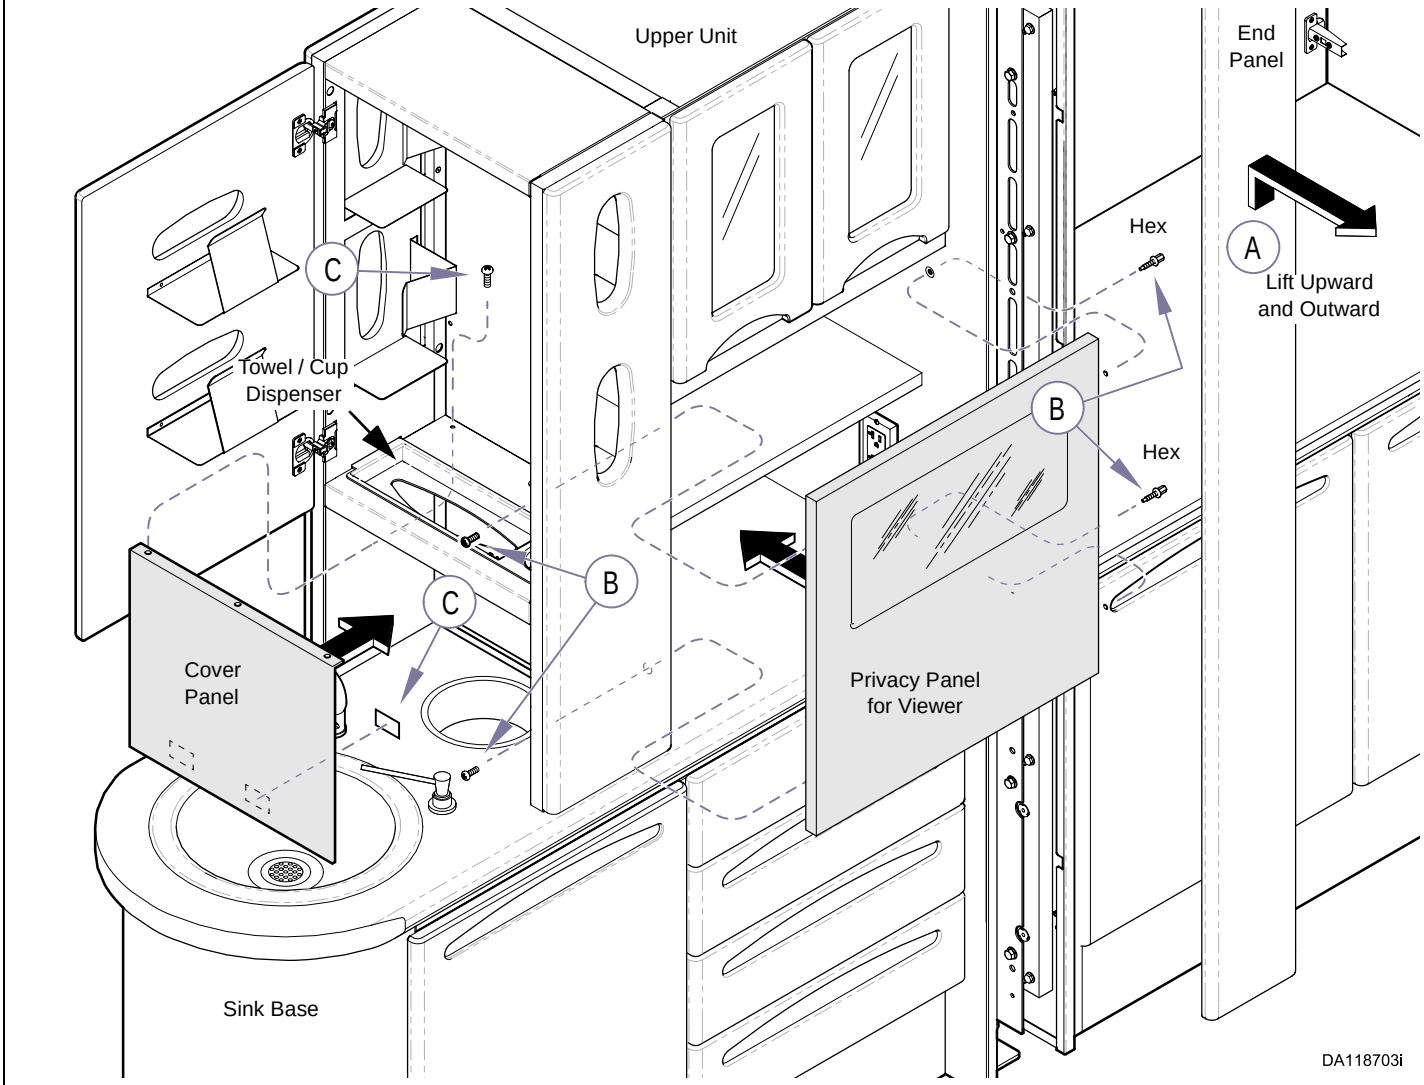

A. Remove end panels from Center Column.

EQUIPMENT ALERT

Do not over-tighten hex head mounting bolts.Torque to 50-55 inch / lbs.

B. Place Privacy Panel in position and secure with two #10-24 x 5/8" Hex head screws (Column side) and two #10-24 x 5/8" phillips head screws (Dispenser side). Remove Towel / Cup Dispenser.

C. Remove cover from adhesive tape, press Cover Panel in position on Dispenser Unit, and secure with three #10-24 x 3/8" phillips head screws. Install Towel / Cup Dispenser.

Midmark Corporation
60 Vista Drive
P.O. Box 286
Versailles, Ohio 45380-0286
937-526-3662
Fax 937-526-5542
midmark.com

003-1318-00 Rev. B (12/02)

© Midmark Corporation - 2002